

MOTINOVA Mid drive system communication protocol of BMS

Drafted by: Dail. zhou

Checked by: Rita. xiao

Approved by: Fern. wang

MOTINOVA TECHNOLOGY LIMITED

2024-04-15

Catalog

1 General	3
2 Purpose	3
3 Scope of application	3
4 Revision History	3
MOTINOVA Mid drive system communication protocol of BMS	4
1 System components	4
2 Hardware interface	4
2.1 Reference circuit	4
2.2 Notes	5
3 Communication protocol rules	5
3.1 Software configuration	5
3.2 Frame format	5
3.2.1 Frame format	5
3.2.2 CAN ID allocation	6
3.2.3 Packaging method	6
4 Communication content	7
4.1 Sent by BMS	7
4.2 Sent by PBU/OBC/ECU	9
4.3 Sent by HMI	10
4.4 Sent by CDL	10
5 Appendix 1: CRC32 calculation method	10
5.1 Calculation polynomial table	10
5.2 Calculation method	12

1 General

The system communication bus adopts the CAN2.0A protocol standard frame format for data transmission, and this document specifies each device ID, message transmission format, and data protocol.

2 Purpose

Improve signal stability, format correctness and information integrity of data communication between devices in the MOTINOVA E-Bike electrical system.

3 Scope of application

This document is applicable to the software development of MOTINOVA motor control system, as well as the function development of intelligent battery protection board and various instruments.

4 Revision History

Tabel1 Revision History

Date	Modifier	Content	Version
2022-11-09	Dail	First release.	V4.2.1
2023-05-15	Dail	Change the BMS ESD Protect level for 36V and 48V system.	V4.2.2
2023-06-10	Dail	Add cycle count in run information.	V4.2.2
2023-07-28	Dail	Add history information.	V4.4.1
2023-10-13	Dail	1. Increase the remaining charging time in run information; 2. Increase the number of cells in the design information.	V4.5.1
2024-04-15	Dail	Increase the product label information, support up to 32 characters.	V4.6.1

MOTINOVA Mid drive system communication protocol of BMS

1 System components

MC: Motor Controller

BMS: Battery Management System

PBU: Push Button Unit

HMI: Human Machine Interface

OBC: OnBoard Computer

CDL: CAN Dongle

APP: Application

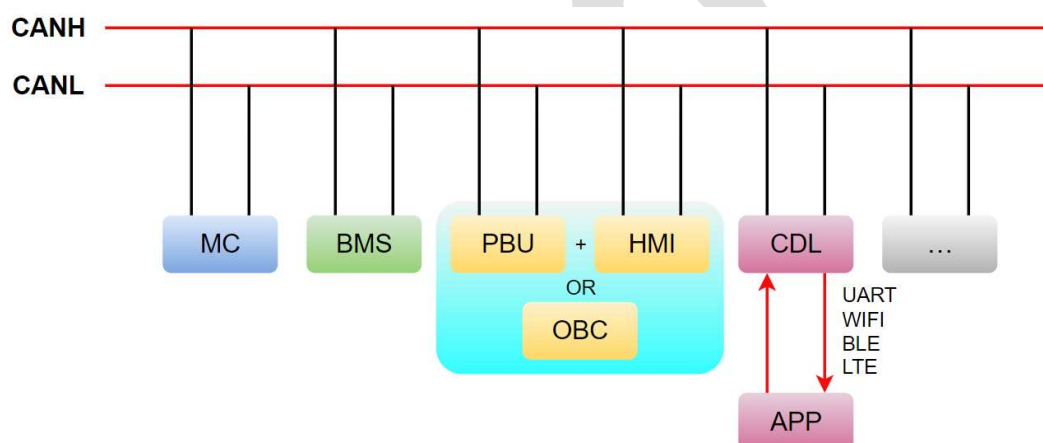


Figure1 Schematic diagram of system communication interface

2 Hardwareinterface

2.1 Referencecircuit

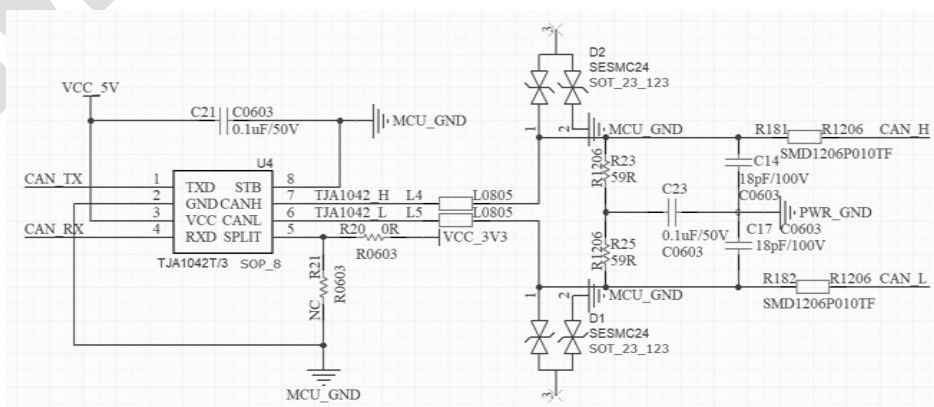


Figure2 Communication interface reference circuit

2.2 Notes

Figure 2 shows the CAN communication interface reference circuit for each component, and the following points should be noted when designing:

1) ESD protection circuit design needs to consider that when the power line and the communication line are short-circuited, it will not cause the ESD protection device to be broken down, and the maximum voltage of the power line is tested according to the maximum working voltage. For the 36V system should be 42V, and the 48V system is 54.6V;

2) The termination resistor is designed inside the BMS and PBU/OBC, and other components are reserved;

3) BMS needs to consider the communication interface galvanic isolation design.

3 Communication protocol rules

3.1 Software configuration

The recommended configuration of the CAN controller is as follows:

Clock frequency: 1000 KHz / 2000 KHz

SJW: 1

BS1: 6

BS2: 1

Baud rate: 125 Kbps / 250 Kbps

3.2 Frame format

3.2.1 Frame format

The protocol describes the data content of each frame, including frame header, command segment length, command word, data segment, check bit and frame tail.

The format of each frame is as follows:

Tabel2 Frame format

Header	Mode	Length	Command	Data	CRC	Tail
0x55 0xAA	Read/Write/Report	LENGTH	COMMAND	DATA	CRC	0xF0

Inside:

1) The fixed frame head is 0x55 0xAA and the fixed frame tail is 0xF0;

- 2) The frame mode includes reading 0x11, writing 0x16, and reporting 0x0C.
When any device receives the write instruction, it needs to send general feedback instruction according to the data source;
- 3) The length is sum of command and data, onebyteoverhead for it;
- 4) Command indicates function of the frame, two bytes overhead for it;
- 5) Data includes the content of the frame, length is adjustable;
- 6) The CRC calculation result takes 4 bytes. When calculating, you need to insert CAN ID between frame header and frame mode. Such as: CAN ID is 0x712, and the frame content is 0x55 0xAA 0x11 0x03 0x22 0x01 0x00 CRC1 CRC2 CRC3 CRC4 0xF0, so you should input 0x55 0xAA 0x07 0x12 0x11 0x03 0x22 0x01 0x00 to the calculated function. The results are written into CRC1 CRC2 CRC3 and CRC4 from high to low;;
- 7) When fill the data segment, little-endian is adopt.

3.2.2 CAN ID allocation

Tabel3 CAN ID allocation

MC	Target	Broadcast	MC	BMS	PBU/OBC/ECU	HMI	CDL
	CAN ID	N/A		N/A	N/A	N/A	N/A
BMS	Target	Broadcast	MC	BMS	PBU	HMI	CDL
	CAN ID	0x720	N/A		N/A	N/A	N/A
PBU/OBC/ECU	Target	Broadcast	MC	BMS	PBU	HMI	CDL
	CAN ID	N/A	N/A	0x732		N/A	N/A
HMI	Target	Broadcast	MC	BMS	PBU	HMI	CDL
	CAN ID	N/A	N/A	0x742	N/A		N/A
CDL	Target	Broadcast	MC	BMS	PBU	HMI	CDL
	CAN ID	N/A	N/A	0x752	N/A	N/A	

3.2.3 Packaging method

For data frames with a length of more than 8 bytes, subcontract in the way of 8 + N, and fill in the same ID number for each data packet, as shown in the following table:

Tabel4 Packaging method

Index	1				N	
Content	ID	Byte1~Byte8	ID	Byte1~Byte8	ID	Byte1~ByteN

4 Communication content

4.1 Sent by BMS

Table5 Command list Sent by BMS

ID	Mode	Command	Function	Data
0x720	0x0C	0x1010	When BMS received the command 0x5000 from PBU/OBC/ECU, or the command 0x3400 form CDL, this command will be sent by BMS. This data package contains the running information of the BMS.	Byte1-Byte2: Bus voltage, unit is mV Byte3-Byte4: Bus current, unit is mA Byte5-Byte6: Remain capacity, unit is mAh Byte7-Byte8: Full charged capacity, unit is mAh Byte9: Cell temperature, need to cut 40, unit is Centigrade Byte10: SOC, from 0% to 100% Byte11: 0x01-Charge state, 0x00-Sleep Byte12: SOH, from 0% to 100% Byte13-Byte14: Cycle count Byte15-Byte16: Remain charge time, unit is min
0x720	0x0C	0x1120	Cell voltage (The excess fills the 0x00)	Byte1-Byte2: Cell 1 Byte3-Byte4: Cell 2 Byte5-Byte6: Cell 3 Byte7-Byte8: Cell 4 Byte9-Byte10: Cell 5 Byte11-Byte12: Cell 6 Byte13-Byte14: Cell 7 Byte15-Byte16: Cell 8 Byte17-Byte18: Cell 9 Byte19-Byte20: Cell 10 Byte21-Byte22: Cell 11 Byte23-Byte24: Cell 12 Byte25-Byte26: Cell 13 Byte27-Byte28: Cell 14 Byte29-Byte30: Cell 15 Byte31-Byte32: Cell 16
0x720	0x0C	0x1204	When the BMS goes into fault, the BMS sends fault code in 500ms period. After the fault disappears, it	By bit or logical calculation, 0-normal, 1-abnormal. Four bytes can represent 32 types of faults at most.

			stop send fault code.	High 16bit: 0x00000000 Low 16bit: 0x0001:Discharge overcurrent protection 2st 0x0002:Charge overcurrent protection 0x0004:Short circuit protection 0x0008:Over discharge protection 0x0010:Over charge protection 0x0020:Discharge low temperature protection 0x0040:Discharge over temperature protection 0x0080:Charge low temperature protection 0x0100: Charge Over temperature protection 0x0200:D-MOS fault 0x0400: C-MOS fault 0x0800:NTC fault 0x1000: Discharge overcurrent alarm 1st 0x2000: Discharge overcurrent protection 1st 0x4000:AFE fault 0x8000:N/A
0x720	0x0C	0x1308	When the BMS goes to sleep, or turns off the D-MOS, and send it 1s in advance. According to the application requirements, BMS can be designed into three types: manual sleep(Press and hold the key for 3s), automatic sleep(Bus current is less than 500mA and CAN-Bus is	Fixed as “SHUTDOWN”, encoded in ASCII.

			idle) and no sleep(Keep awake unless there is a failure).	
0x720	0x0C	0x1410	When BMS received the command 0x5200 from PBU/OBC/ECU, or the command 0x5100 from HMI, or command 0x3600 from CDL, this command will be sent by BMS. This data package contains the design information of the BMS.	Byte1-Byte2: Design capacity, unit is mAh Byte3: Design voltage, unit is V Byte4-Byte11: Cell Model, encoded in ASCII, Extra bytes are filled as 0x2E. Byte12: Cell numbers in the battery Byte13-Byte16: 0x00
0x720	0x0C	0x1540	When BMS received the command 0x5100 from PBU/OBC/ECU, or the command 0x5000 from HMI, or command 0x3300 from CDL, this command will be sent by BMS. This data package contains the version information of BMS.	The following information is encoded in ASCII, Extra bytes are filled as 0x2E. Byte1-Byte16: The model of BMS. Byte17-Byte32: The serial number of BMS. Byte33-Byte48: The hardware version of BMS. Byte49-Byte64: The software version of BMS.
0x720	0x0C	0x1810	User usage records of the battery	Byte1: Maximum cell temperature, need to cut 40, unit is Centigrade Byte2: Minimum cell temperature, need to cut 40, unit is Centigrade Byte3-Byte4: The time between recent charges Byte5-Byte6: Maximum charge interval time Byte7-Byte16: 0x00
0x725	0x0C	0x5720	Product label information	ASCII, Invalid fill 0x00

4.2 Sent by PBU/OBC/ECU

Tabel 6 Command list of sent by PBU/OBC/ECU

ID	Mode	Command	Function	Data
0x732	0x11	0x5000	Read BMS running	No content

			information	
0x732	0x11	0x5100	Read BMS version information	No content
0x732	0x11	0x5200	Read BMS design information	No content
0x732	0x11	0x5300	Read BMS cell voltage information	No content
0x732	0x11	0x5400	Read BMS user usage records	No content

4.3 Sent by HMI

Tabel7 Command list of sent by HMI

ID	Mode	Command	Function	Data
0x742	0x11	0x5000	Read BMS version information	No content
0x742	0x11	0x5100	Read BMS design information	No content
0x742	0x11	0x5200	Read BMS cell voltage information	No content
0x742	0x11	0x5300	Read BMS user usage records	No content

4.4 Sent by CDL

Tabel8 Command list of sent by CDL

ID	Mode	Command	Function	Data
0x752	0x11	0x3300	Read BMS version information	No content
0x752	0x11	0x3400	Read BMS running information	No content
0x752	0x11	0x3500	Read BMS cell voltage information	No content
0x752	0x11	0x3600	Read BMS design information	No content
0x752	0x11	0x4500	Read product label information	No content
0x752	0x16	0x4620	Write product label information	ASCII, Invalid fill 0x00

5 Appendix 1: CRC32 calculation method

5.1 Calculation polynomial table

```
1. uint32_t Crc32Table[ 256 ] =
2. {
```

```

3. 0x00000000, 0x04C11DB7, 0x09823B6E, 0x0D4326D9, 0x130476DC, 0x17C56B6B,
4. 0x1A864DB2, 0x1E475005, 0x2608EDB8, 0x22C9F00F, 0x2F8AD6D6, 0x2B4BCB61,
5. 0x350C9B64, 0x31CD86D3, 0x3C8EA00A, 0x384FBDBD, 0x4C11DB70, 0x48D0C6C7,
6. 0x4593E01E, 0x4152FDA9, 0x5F15ADAC, 0x5BD4B01B, 0x569796C2, 0x52568B75,
7. 0x6A1936C8, 0x6ED82B7F, 0x639B0DA6, 0x675A1011, 0x791D4014, 0x7DDC5DA3,
8. 0x709F7B7A, 0x745E66CD, 0x9823B6E0, 0x9CE2AB57, 0x91A18D8E, 0x95609039,
9. 0x8B27C03C, 0x8FE6DD8B, 0x82A5FB52, 0x8664E6E5, 0xBE2B5B58, 0xBAEA46EF,
10. 0xB7A96036, 0xB3687D81, 0xAD2F2D84, 0xA9EE3033, 0xA4AD16EA, 0xA06C0B5D,
11. 0xD4326D90, 0xD0F37027, 0xDBC056FE, 0xD9714B49, 0xC7361B4C, 0xC3F706FB,
12. 0xCEB42022, 0xCA753D95, 0xF23A8028, 0xF6FB9D9F, 0xFBB8BB46, 0xFF79A6F1,
13. 0xE13EF6F4, 0xE5FFEB43, 0xE8BCCD9A, 0xEC7DD02D, 0x34867077, 0x30476DC0,
14. 0x3D044B19, 0x39C556AE, 0x278206AB, 0x23431B1C, 0x2E003DC5, 0x2AC12072,
15. 0x128E9DCF, 0x164F8078, 0x1B0CA6A1, 0x1FCDBB16, 0x018AEB13, 0x054BF6A4,
16. 0x0808D07D, 0x0CC9CDCA, 0x7897AB07, 0x7C56B6B0, 0x71159069, 0x75D48DDE,
17. 0x6B93DDDB, 0x6F52C06C, 0x6211E6B5, 0x66D0FB02, 0x5E9F46BF, 0x5A5E5B08,
18. 0x571D7DD1, 0x53DC6066, 0x4D9B3063, 0x495A2DD4, 0x44190B0D, 0x40D816BA,
19. 0xACA5C697, 0xA864DB20, 0xA527FDF9, 0xA1E6E04E, 0xBFA1B04B, 0xBB60ADFC,
20. 0xB6238B25, 0xB2E29692, 0x8AAD2B2F, 0x8E6C3698, 0x832F1041, 0x87EE0DF6,
21. 0x99A95DF3, 0x9D684044, 0x902B669D, 0x94EA7B2A, 0xE0B41DE7, 0xE4750050,
22. 0xE9362689, 0xEDF73B3E, 0xF3B06B3B, 0xF771768C, 0xFA325055, 0xFE34DE2,
23. 0xC6BCF05F, 0xC27DEDE8, 0xCF3ECB31, 0xCBFFD686, 0xD5B88683, 0xD1799B34,
24. 0xDC3ABDED, 0xD8FBA05A, 0x690CE0EE, 0x6DCDFD59, 0x608EDB80, 0x644FC637,
25. 0x7A089632, 0x7EC98B85, 0x738AAD5C, 0x774BB0EB, 0x4F040D56, 0x4BC510E1,
26. 0x46863638, 0x42472B8F, 0x5C007B8A, 0x58C1663D, 0x558240E4, 0x51435D53,
27. 0x251D3B9E, 0x21DC2629, 0x2C9F00F0, 0x285E1D47, 0x36194D42, 0x32D850F5,
28. 0x3F9B762C, 0x3B5A6B9B, 0x0315D626, 0x07D4CB91, 0x0A97ED48, 0x0E56F0FF,
29. 0x1011A0FA, 0x14D0BD4D, 0x19939B94, 0x1D528623, 0xF12F560E, 0xF5EE4BB9,
30. 0xF8AD6D60, 0xFC6C70D7, 0xE22B20D2, 0xE6EA3D65, 0xEBA91BBC, 0xEF68060B,
31. 0xD727BBB6, 0xD3E6A601, 0xDEA580D8, 0xDA649D6F, 0xC423CD6A, 0xC0E2D0DD,
32. 0xCDA1F604, 0xC960EBB3, 0xBD3E8D7E, 0xB9FF90C9, 0xB4BCB610, 0xB07DABA7,
33. 0xAE3AFBA2, 0xAABFE615, 0xA7B8C0CC, 0xA379DD7B, 0x9B3660C6, 0x9FF77D71,
34. 0x92B45BA8, 0x9675461F, 0x8832161A, 0x8CF30BAD, 0x81B02D74, 0x857130C3,
35. 0x5D8A9099, 0x594B8D2E, 0x5408ABF7, 0x50C9B640, 0x4E8EE645, 0x4A4FFBF2,
36. 0x470CDD2B, 0x43CDC09C, 0x7B827D21, 0x7F436096, 0x7200464F, 0x76C15BF8,
37. 0x68860BFD, 0x6C47164A, 0x61043093, 0x65C52D24, 0x119B4BE9, 0x155A565E,
38. 0x18197087, 0x1CD86D30, 0x029F3D35, 0x065E2082, 0x0B1D065B, 0x0FDC1BEC,
39. 0x3793A651, 0x3352BBE6, 0x3E119D3F, 0x3AD08088, 0x2497D08D, 0x2056CD3A,
40. 0x2D15EBE3, 0x29D4F654, 0xC5A92679, 0xC1683BCE, 0xCC2B1D17, 0xC8EA00A0,
41. 0xD6AD50A5, 0xD26C4D12, 0xDF2F6BCB, 0xDBEE767C, 0xE3A1CBC1, 0xE760D676,
42. 0xEA23F0AF, 0xEEE2ED18, 0xF0A5BD1D, 0xF464A0AA, 0xF9278673, 0xFDE69BC4,
43. 0x89B8FD09, 0x8D79E0BE, 0x803AC667, 0x84FBDBD0, 0x9ABC8BD5, 0x9E7D9662,
44. 0x933EB0BB, 0x97FFAD0C, 0xAFB010B1, 0xAB710D06, 0xA6322BDF, 0xA2F33668,
45. 0xBCB4666D, 0xB8757BDA, 0xB5365D03, 0xB1F740B4
46. };

```

5.2 Calculation method

```
1. uint32_t CRC32_Calculate( uint8_t *pData, uint16_t Length )
2. {
3.     uint32_t nReg;
4.     uint32_t nTemp = 0;
5.     uint16_t i, n;
6.
7.     nReg = 0xFFFFFFFF;
8.     for ( n = 0; n < Length; n++ )
9.     {
10.        nReg ^= (uint32_t) pData[ n ];
11.        for ( i = 0; i < 4; i++ )
12.        {
13.            nTemp = Crc32Table[ ( uint8_t )( ( nReg >> 24 ) & 0xFF ) ];
14.            nReg <<= 8;
15.            nReg ^= nTemp;
16.        }
17.    }
18.    return nReg;
19. }
```